

INSTALLATION INSTRUCTIONS FOR THE GUTTER GRIP SYSTEM

REPLACEMENT GUTTER INSTALLATION


1. Remove existing gutter and brackets.
2. Ensure Fascia is in good condition.
3. Follow the instructions below i.e. New Gutter Installation.

NEW GUTTER INSTALLATION - BEFORE ROOF MATERIAL IS FITTED

GETTING STARTED


1. Calculate roof catchment area.
2. Calculate the number of downpipes required refer to Building code of Australia.
3. Calculate lineal metres of gutter, then divide by 1.7 = number of Gutter Grip strips required.
4. Calculate the quantity of Gutter Grip components = 1 Gutter Rod & 3 Spacer Blocks per Gutter strip (allowing a maximum of 500mm from corners and between each strip).

Note: The Gutter Strips are 1200mm in length and can be cut down to 500 or 680 mm in length to fit short runs. Fixings are required at a maximum of 750mm intervals. Spacer Blocks are required at each fixing point if they are being used. Gutter Rods are to have a maximum spacing of 2000mm.

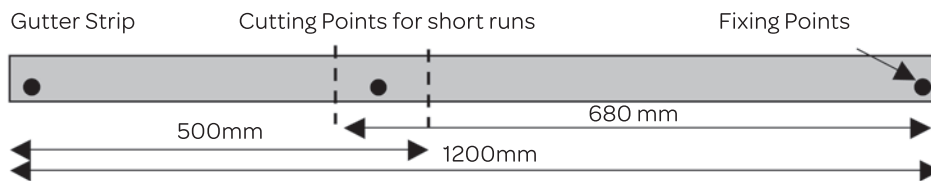


GUTTER GRIP COMPONENTS

SPACER BLOCK

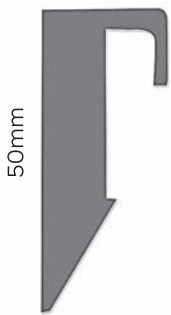

GUTTER ROD

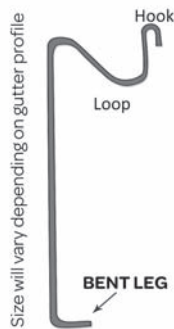


GUTTER STRIP – 1200mm in length



SETTING STRING LINE (FIXING LINE)



5. Select location of downpipes and highpoints around the roof area.
6. Measure and mark a minimum of 50mm below the top of the fascia at the high point.
Note: The roof materials (e.g. Tiles) are not to sit on top of the Gutter Strip or Spacer Blocks.
7. Calculate the fall required to downpipe locations.
8. Measure and mark fall to low points (downpipe locations).
9. Fix temporary screws at High and Low points.
10. Run string line between the temporary screws to define fixing line for Gutter Strips.

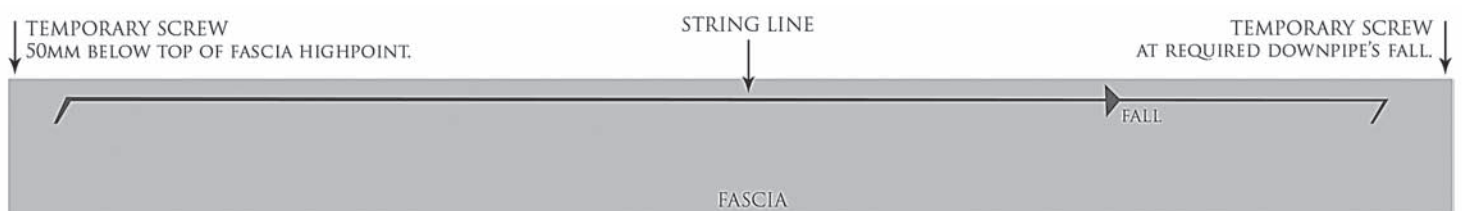

Visit www.guttergrip.com.au or Phone: 02 4016 4259 for further information

GUTTER GRIP ASSEMBLY AND INSTALLATION


11. Clip Gutter Grip Spacer Blocks onto the back (short side) of the Gutter Strips at fixing holes.
12. Align bottom edge of Gutter Strips to string line.

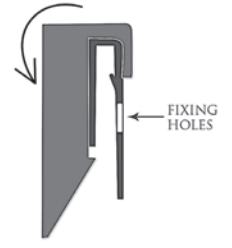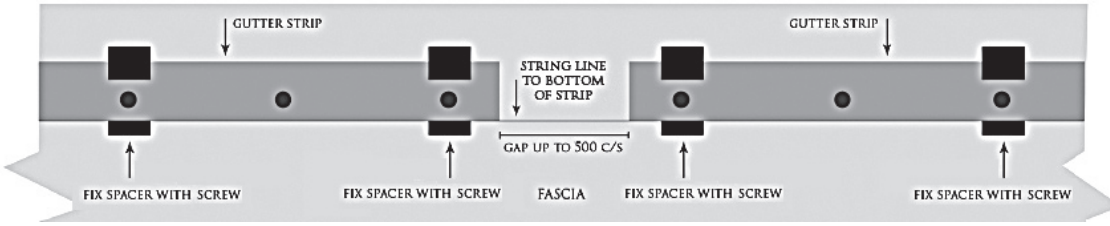

13. Fix the Gutter Strips to the fascia with screws through the fixing holes penetrating Spacer Blocks at the same time. Spacer blocks are to be placed at a maximum of 750mm centres. Recommended Screw Types are:

- Metal Fascia – #10 Wafer or Button head galvanised steel screw with a minimum length of 20mm or #8-20mm Hex head stitching screws.
- Timber Fascia – #10 Wafer or Button head galvanised timber screw with a minimum length of 25mm





14. Remove string line and temporary screws.

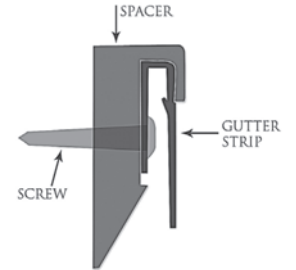

GUTTER AND GUTTER ROD INSTALLATION

15. Install the gutter by guiding the back edge of gutter into the Gutter Strips (that are now fixed to the fascia) until the fixing lugs are engaged (it will click).
16. Install Gutter Rods at a maximum of 2000mm centres. Engage hook end of the Gutter Rod under front bead of gutter 20mm to the left of a fixing hole in the Gutter Strip. Then rotate gutter rod into gutter towards the Gutter Strip and engage bent leg of Gutter Rod into fixing hole.

Note: Gutter Rods can be installed and or removed (for example gutter cleaning) when roof is installed.

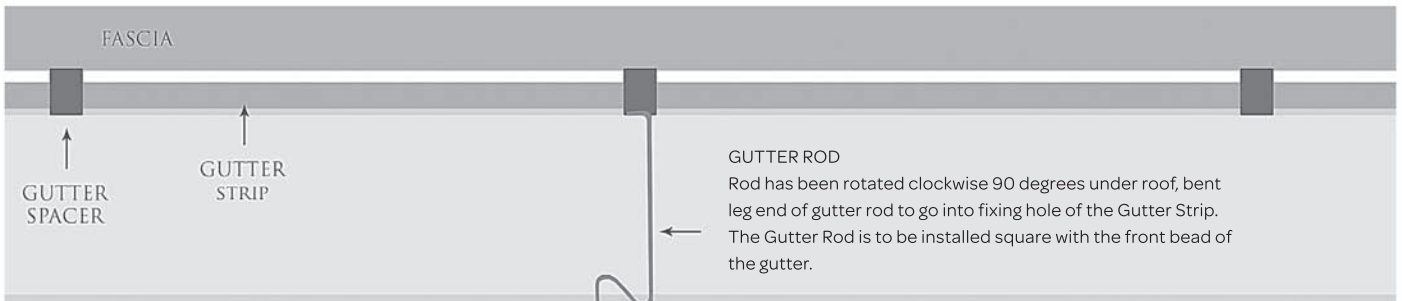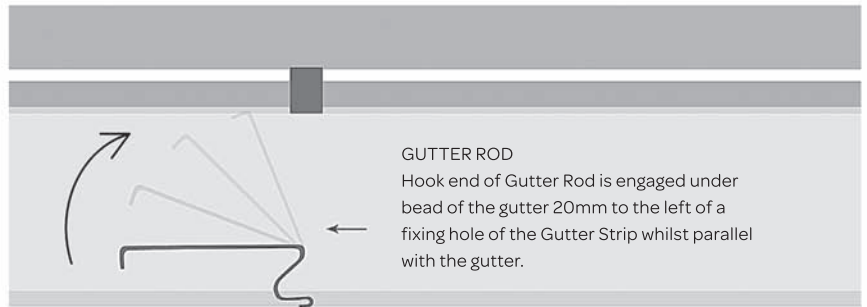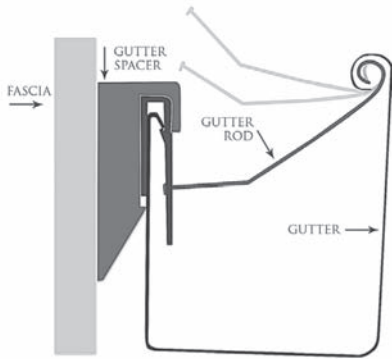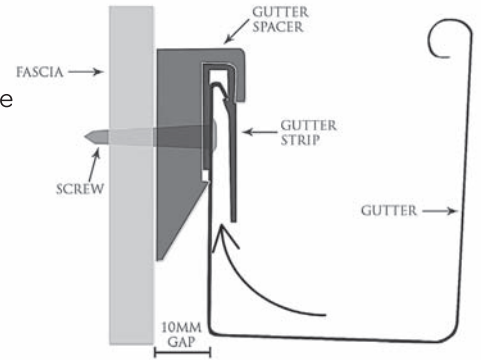

17. Fit internal and external corner brackets if required as per gutter manufacturer's guidelines.



Visit www.guttergrip.com.au or Phone: 02 4016 4259 for further information